

I: Philco/LG/SAMSUNG LED LCD TV can be used directly without setting
 II: For common LCD brand.SET + 1..2..3..4..5.. light flash three times.
 III:Remote keyboard for brand:

Setting with Brand:

SET+"1"	LG	SET+"6"	TOSHIBA/JVC	SET+"0"	TCL/KONKA	SET+"CH.LIST"	NOBEL	SET+"BACK/RETURN"	HANNIBAL	SET+"PMODE"	WALTON-2	SET+"◀"	SHOWNIC
SET+"2"	SONY/CCE	SET+"7"	PHILIPS -1	SET+"INFO"	AOC	SET+"▲"	MYONE	SET+"EXIT"	SANSUI	SET+"NETFLIX"	SUNN	SET+"▶"	VESTEL-2
SET+"3"	SAMSUNG	SET+"8"	Haier	SET+"AUDIO"	Hisense	SET+"◀"	NOVA	SET+"SLEEP"	MYCHOICE	SET+"GUIDE"	ECOSTAR	SET+"◀◀"	TOSHIBA-2
SET+"4"	SHARP	SET+"9"	HITACHI & SANYO	SET+"REC ▶"	PHILIPS-2	SET+"▶"	ORINT	SET+"FAV"	SINGER	SET+"▶▶"	CONDOR	SET+"▶▶"	DAWOO/AOC-2
SET+"5"	Panasonic	SET+"S.MODE"	Philco	SET+"MENU"	VESTEL -1	SET+"▼"	SONIC/GRUNDIG-2	SET+"C▶"	WALTON/GRUNDIG-1	SET+"■"	BRANDT/MAJOR	SET+"YouTube"	Pioneer/BAUHN

SET+"SIZE"	THOMSON
SET+"amazon/Y"	X.VISION/JVC-2

Setting with Code:

I: If TV brand is not confirm ,please find the code form the color instructions paper .
 II: Press "SET"+"POWER", light is on,
 III:Press three code***, light off , setting finish



004: Polaroid, KONKA Y67, KONKA, KONKA, KONKA, KONKA, Haier, ECOSTAR GENERAL, KTC, ORIENT, TCL, ECOSTAR, TRANSTEC, AKAI, Haier, SUNNY, ORIENT, SUNNY, HAIR, AOC, SINGSUNG, Haier, Haier, TCL, TCL, TCL, NOBEL, SINGER, LED, AKIRA, MYONE, MYONE, SONIC, ASANO, STAR-X, SX-48E, OLEVIA

005: Haier, ECOSTAR GENERAL, KTC, ORIENT, TCL, ECOSTAR, TRANSTEC, AKAI, Haier, SUNNY, ORIENT, SUNNY, HAIR, AOC, SINGSUNG, Haier, Haier, TCL, TCL, TCL, NOBEL, SINGER, LED, AKIRA, MYONE, MYONE, SONIC, ASANO, STAR-X, SX-48E, OLEVIA

006: Haier, Haier, TCL, TCL, TCL, NOBEL, SINGER, LED, AKIRA, MYONE, MYONE, SONIC, ASANO, STAR-X, SX-48E, OLEVIA

007: Haier, Haier, TCL, TCL, TCL, NOBEL, SINGER, LED, AKIRA, MYONE, MYONE, SONIC, ASANO, STAR-X, SX-48E, OLEVIA

008: Haier, Haier, TCL, TCL, TCL, NOBEL, SINGER, LED, AKIRA, MYONE, MYONE, SONIC, ASANO, STAR-X, SX-48E, OLEVIA

009: Haier, Haier, TCL, TCL, TCL, NOBEL, SINGER, LED, AKIRA, MYONE, MYONE, SONIC, ASANO, STAR-X, SX-48E, OLEVIA

010: Haier, Haier, TCL, TCL, TCL, NOBEL, SINGER, LED, AKIRA, MYONE, MYONE, SONIC, ASANO, STAR-X, SX-48E, OLEVIA

011: Haier, Haier, TCL, TCL, TCL, NOBEL, SINGER, LED, AKIRA, MYONE, MYONE, SONIC, ASANO, STAR-X, SX-48E, OLEVIA

012: ROISON, KONKA, LCD, LCD, LED, GENERAL, SUNN, DEVANT, LED, LED-1177, 20LCDTV, WEGASTAR, PENSOC, PANDA, Hisense, SAMSUNG, LED, STAR, LCD, GENERAL, LE, LED, LED, HBT02/03, CTC, XY-801, HBT02, LED, JSPN/ASIA, GENRAL, LCD, LCD, LED, GYW, POLAROID, POLAROID, LCD, LCD, LED

013: ROISON, KONKA, LCD, LCD, LED, GENERAL, SUNN, DEVANT, LED, LED-1177, 20LCDTV, WEGASTAR, PENSOC, PANDA, Hisense, SAMSUNG, LED, STAR, LCD, GENERAL, LE, LED, LED, HBT02/03, CTC, XY-801, HBT02, LED, JSPN/ASIA, GENRAL, LCD, LCD, LED, GYW, POLAROID, POLAROID, LCD, LCD, LED

014: ROISON, KONKA, LCD, LCD, LED, GENERAL, SUNN, DEVANT, LED, LED-1177, 20LCDTV, WEGASTAR, PENSOC, PANDA, Hisense, SAMSUNG, LED, STAR, LCD, GENERAL, LE, LED, LED, HBT02/03, CTC, XY-801, HBT02, LED, JSPN/ASIA, GENRAL, LCD, LCD, LED, GYW, POLAROID, POLAROID, LCD, LCD, LED

015: ROISON, KONKA, LCD, LCD, LED, GENERAL, SUNN, DEVANT, LED, LED-1177, 20LCDTV, WEGASTAR, PENSOC, PANDA, Hisense, SAMSUNG, LED, STAR, LCD, GENERAL, LE, LED, LED, HBT02/03, CTC, XY-801, HBT02, LED, JSPN/ASIA, GENRAL, LCD, LCD, LED, GYW, POLAROID, POLAROID, LCD, LCD, LED

016: ROISON, KONKA, LCD, LCD, LED, GENERAL, SUNN, DEVANT, LED, LED-1177, 20LCDTV, WEGASTAR, PENSOC, PANDA, Hisense, SAMSUNG, LED, STAR, LCD, GENERAL, LE, LED, LED, HBT02/03, CTC, XY-801, HBT02, LED, JSPN/ASIA, GENRAL, LCD, LCD, LED, GYW, POLAROID, POLAROID, LCD, LCD, LED

017: ROISON, KONKA, LCD, LCD, LED, GENERAL, SUNN, DEVANT, LED, LED-1177, 20LCDTV, WEGASTAR, PENSOC, PANDA, Hisense, SAMSUNG, LED, STAR, LCD, GENERAL, LE, LED, LED, HBT02/03, CTC, XY-801, HBT02, LED, JSPN/ASIA, GENRAL, LCD, LCD, LED, GYW, POLAROID, POLAROID, LCD, LCD, LED

018: ROISON, KONKA, LCD, LCD, LED, GENERAL, SUNN, DEVANT, LED, LED-1177, 20LCDTV, WEGASTAR, PENSOC, PANDA, Hisense, SAMSUNG, LED, STAR, LCD, GENERAL, LE, LED, LED, HBT02/03, CTC, XY-801, HBT02, LED, JSPN/ASIA, GENRAL, LCD, LCD, LED, GYW, POLAROID, POLAROID, LCD, LCD, LED

019: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

020: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

021: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

022: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

023: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

024: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

025: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

026: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

027: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

028: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

029: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

030: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

031: LCD, LCD, Mitsun, LCD, SKYWORTH, SKYWORTH, SHOWNIC, ORICNT, WARRHUE-2015, WALTON, WALTOND, ORIENT, YASIN, WALTON, INSAF, BD LCD, LED, LCD, Soprano, ST7COM, HANNIBAL, NOVA, SONY, NOBEL, AKIRA, REDLINE, WALTON, MYONE, YK-0730TE, ROSSO, EUROPIX, EUROPIX, STARSAT, SONIC, STAR-X, 2300-EP000, 2207-EP000, WICON, 2207-EP000, GENERALGOLD

032: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

033: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

034: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

035: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

036: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

037: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

038: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

039: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

040: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

041: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

042: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

043: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809

044: Hisense, LCD, ROSSO, Myone, Myone, SAMSUNG, SHOWNIC, OG, HISANSAT, GOSONIC, ROSSO, KONKA Y257, ORIENT, TCL, LCD, STARSAT, VIVA, LCD, BP9, AFRON DAYTEK, LCD, GENERAL STAR-X, GENERAL, GENERAL, GENERAL, SHOWNIC, SHOWNIC, GENERALGOLD, POLYSTAR, KONKA, Kalvinatar, LCD, LCD, GOSONIC, GOSONIC, MIRAY, RECCO, RM7809



Universal LCD/LED TV Fernbedienung

Einstellung mit Code:
 I. Wenn die Fernbedienung nicht funktioniert, drücken Sie bitte den Code aus der Parameterliste.
 II. Drücken Sie "Set" + "Power", Licht leuchtet.
 III. Drücken Sie "Set" + "Power", Licht leuchtet.
 IV. Drücken Sie "Set" + "Power", Licht aus.
 Einleitung beenden.

Eine Schlüsselsuche:
 Wenn die Fernbedienung nicht auf dem Fernseher empfangen werden will.
 I. Bitte drücken Sie "Set" die ganze Zeit, Licht leuchtet.
 II. Wenn die "Volume" im TV anstrahlt, drücken Sie den "Set" Taste.
 III. Überprüfen Sie andere Tasten oder nicht, wenn nicht, bitte nach unten 1-2 kommen.

Eins nach eins suchen:
 I. Drücken Sie "Set" + "Power", Licht leuchtet.
 II. Drücken Sie "Ch" oder "Ch" + "Power" einmal um ein Mal, wenn sich Ihre LCD-Kanäle ändern, überprüfen Sie andere Tasten, bis Sie kommen nach 2 wieder.

Automatische Suche:
 I. Drücken Sie "Set" + "Power", Licht leuchtet.
 II. Drücken Sie "Ch" oder "Ch" + "Power" einmal um ein Mal, wenn sich Ihre LCD-Kanäle ändern, überprüfen Sie andere Tasten, bis Sie kommen nach 2 wieder.

Télécommande Universel pour Téléviseur LCD / LED

Réglage avec code:
 I. Si le marque TV n'est pas confirmé, veuillez trouver le code à partir du papier d'instructions de codes.
 II. Appuyez sur "Set" tout le temps, la lumière est allumée.
 III. Appuyez sur "Set" + "Power", la lumière est allumée.
 IV. Appuyez sur "Set" + "Power", la lumière est éteinte.

Une recherche clé:
 Si votre image à distance ne s'affiche pas sur le papier d'instructions de codes.
 I. Appuyez sur "Set" tout le temps, la lumière est allumée.
 II. Lorsque l'indicateur "Volume" sur le téléviseur, appuyez sur "Set" la fois.
 III. Vérifiez que d'autres clés fonctionnent ou non, sinon, repérez 1-2.

Recherche d'un par un:
 I. Appuyez sur "Set" + "Power", la lumière est allumée.
 II. Appuyez sur "Ch" ou "Ch" + "Power" une fois par fois, lorsque votre LCD changer, vérifiez les autres touches.
 III. Si vous ne trouvez pas, repérez-vous encore 2.

Recherche automatique:
 I. Appuyez sur "Set" + "Power", la lumière est allumée.
 II. Appuyez sur "Ch" ou "Ch" + "Power", la lumière brillera une fois par fois, jusqu'à ce que l'indicateur "Volume" se voit allumer.
 III. Appuyez sur "Set", la lumière éteindra, la lumière de réglage.
 IV. Après avoir terminé, mieux retourner les systèmes (Set + OK) terme et déblocage.

Control Remoto Universal para TV de LCD / LED

Definición con código:
 Si el marca de TV no está confirmada, por favor, encuentre o código en el papel de instrucciones de código.
 II. Presione "Set" todo el tiempo, la luz está encendida.
 III. Presione "Set" + "Power", la luz se apagará, definiendo o acobamiento.

Una búsqueda clave:
 Si a imagen remota no for exhibida en el papel de instrucciones de código.
 I. For favor, presione "Set" a tiempo toda a luz va brillando.
 II. Cuando el "Volume" aparece en la TV, ote la brillante.
 III. Cuando el "Volume" aparece en la TV, ote la brillante.
 IV. Verifique que otras teclas funcionan o no, si no, por favor, veñha 1-2 nuevamente.

Uma por uma pesquisa:
 I. Pressione "Set" + "Power", a luz está acesa.
 II. Pressione "Ch" ou "Ch" + "Power" uma vez, quando o seu canal LCD mudar, verifique outras teclas.
 III. Se não estiver funcionando, por favor, verifique novamente 1-2.

Pesquisa automática:
 I. Pressione "Set" + "Power", a luz está acesa.
 II. Pressione "Power" novamente, a luz irá brilhar uma ou duas vezes, até que o volume exibido no TV.
 III. Pressione "Set", luz apagada, ajuste de acobamento.
 IV. Depois de terminar o acobamento, bloqueie o sistema (Set + OK) bloquear e desbloquear.

UNIVERSAL LCD/LED TV REMOTE CONTROL

Setting with Code:
 I. If TV brand is not confirm, please find the code from the code instruction paper.
 II. Press "SET" + "POWER" light is on.
 III. Press three code "" light off, setting finish.

One Key Search:
 If your remote picture not display on the color instruction paper.
 I. Please press "SET" all the time, light will shine.
 II. When the "Volume" is light on TV, loosen the "SET" at once.
 III. Check other keys working or not, if not, please come 1-2 again.

One By One Search:
 I. Press "SET" + "POWER" light is on.
 II. Press "CH" or "CH" + "Power" by one time, when the LCD channel change, check other keys.
 III. If not working, please come 2 again.

Automatic Search:
 I. Press "SET" + "POWER" light is on.
 II. Press "POWER" again light will shine one by one time, until the "Volume" is light on your TV.
 III. Press the "SET" light off, setting finish.
 IV. After setting finish, Better lock the system. ("SET+OK" lock and unlock).

UNIVERALE LCD / LED TV TELECOMANDO

Impostazione con codice:
 I. Se il marchio non è confermato, per favore trovare il codice del documento di istruzioni di colore.
 II. Premere "SET" tutto il tempo, la spia è accesa.
 III. Premere "SET" + "POWER", la spia si accende, definendo o accobamento.

Una chiave di ricerca:
 Se l'immagine remota non viene visualizzata sulla carta d'istruzioni di colore.
 I. Premere "SET" tutto il tempo la luce brilla, quando il "Volume" è "light" viene visualizzato sul televisore, allentare immediatamente "SET".
 II. Controllare che altri tasti funzionino o no, altrimenti riprova di tornare 1-2.

Búsqueda uno por uno:
 I. Presione "Set" + "Power" la luz encienda.
 II. Presione "Ch" o "Ch" + "Power" una vez, cuando su canal LCD cambia, verifique otras teclas o combinación.
 III. Si no funciona, vuelva al paso 1.

Ricerca automatica:
 I. Premere "Set" + "Power" la luz encienda.
 II. Premere "Power" nuovamente, a luz irá brillar una o dos veces, até que o volume exibido no TV.
 III. Premere "Set", luz apagada, configuração final.
 IV. Depois de finalizar a configuração, melhor bloqueie o sistema. ("SET+OK" bloquear y desbloquear).

UNIVERSAL TELEVISOR NUEVO DISEÑO

CONFIGURACIÓN CON CÓDIGO
 I. Si esta marca no está confirmada, por favor busque la lista de instrucciones de color papel.
 II. Presione "SET" todo el tiempo, La Luz brillará.
 III. presione tres "" la zapagada, final de configuración.

UNA LLAVE DE BÚSQUEDA:
 Si la foto de su control remoto no está sobre la pantalla en las instrucciones de color papel.
 I. presione "SET" todo el tiempo, La Luz brillará.
 II. cuando el "Volume" ("light") pantalla esta encendida soltar el "SET" de una vez.
 III. asegure que otros instrucciones o líneas funciones o no, si no, por favor, repase 1 y 2 de nuevo.

Búsqueda automática:
 I. presione "Set" + "Power" la luz encienda.
 II. presione "Power" nuevamente, a luz irá brillar una o dos veces, até que o volume exibido no TV.
 III. presione "Set", luz apagada, configuración final.

Después de finalizar la configuración, mejor bloqueie el sistema. ("SET+OK" bloquear y desbloquear).

УНИВЕРСАЛЬНЫЙ LCD/LED ТЕЛЕВИЗОРНЫЙ ДИСТАНЦИОННЫЙ ПУЛЬТ

Настройка кода:
 I. Если телевизиорный код не подтвержден, найдите код на листе цветной инструкции.
 II. Нажмите "SET" + "POWER", свет будет включен.
 III. Нажмите трижды код "" свет будет выключен, настройка выполнена.

Поиск с одной кнопкой:
 Если ваша дистанционная карта не показывается на листе цветной инструкции.
 I. Нажмите "SET" долго, свет будет включен.
 II. Когда "Volume" показывается на телевизоре, сразу отпустите "SET".
 III. Проверьте рабочий статус других кнопок, если не работают, повторите 1-2 раза.

Поиск один за другим:
 I. Нажмите "SET" + "POWER", свет будет включен.
 II. Нажмите "Ch" или "Ch" + "Power" один за другим, когда "Volume" изменится, проверьте другие кнопки.
 III. Если не работает, повторите 2 раза.

Автоматический поиск:
 I. Нажмите "SET" + "POWER", свет будет включен.
 II. Нажмите "POWER" еще раз, свет мигнет до тех пор, когда "Volume" изменится на телевизоре.
 III. Нажмите "SET", свет выключен, настройка окончена.

После выполнения настройки, лучше заблокировать систему ("SET + OK" блокировка и разблокировка).

عالمي / ليد تليفزيون عن بعد

إعداد الكود:
 I. إذا لم يتم تأكيد الكود، يرجى العثور على الكود من ورقة التعليمات الملونة.
 II. اضغط على "SET" + "POWER"، سيعمل الضوء.
 III. اضغط على الكود "" ثلاث مرات، سيعمل الضوء، الإعداد اكتمل.

البحث بزر واحد:
 إذا لم تظهر الصورة عن بعد على شاشة التعليمات الملونة.
 I. اضغط على "SET" لفترة طويلة، سيعمل الضوء.
 II. عندما يظهر "Volume" ("light") على التلفزيون، اضغط على "SET" مرة واحدة.
 III. تأكد من أن الأزرار الأخرى تعمل أو لا، إذا لم تكن كذلك، كرر 1 و 2 مرة أخرى.

البحث واحدًا تلو الآخر:
 I. اضغط على "SET" + "POWER"، سيعمل الضوء.
 II. اضغط على "Ch" أو "Ch" + "Power" واحدًا تلو الآخر، عندما يتغير "Volume"، تحقق من الأزرار الأخرى.
 III. إذا لم يعمل، كرر 2 مرة أخرى.

البحث التلقائي:
 I. اضغط على "SET" + "POWER"، سيعمل الضوء.
 II. اضغط على "Power" مرة أخرى، سيعلم الضوء حتى يتغير "Volume" على التلفزيون.
 III. اضغط على "SET"، سيعم الضوء، الإعداد اكتمل.
 IV. بعد اكتمال الإعداد، من الأفضل قفل النظام. ("SET+OK" قفل وإلغاء القفل).



Brand	Code	Brand	Code
AOC	005,096,100	NOVA	031
ALOMDA	031	NOBEL	007,031,066
artel	001,007	ORIENT	005,023,037
AFTRON	031,038,048	Philco	020,044
AKAI	010,091	PALSONIC	085,089,091
AKIRA	009,031,111	POLYSTAR	040
BUSH	019,094,097	POLAROID	004,017
BAUHN	118	QHREI	012
CHRANI	013,097	REDLINE	031
CHANGHONG RUBA	001,005,023,040	ROISON	004,012,023
CIRCLE	040	ROSSO	031,032,035
DENKA	007	SHOWNIC	001,023,035,039
ECOSTAR	003,005,069	ALOMDA	040,047
GOSONIC	035,044	SASSIN	105
GENERAL	005,013,015,031	SINGER	007,016,116
038,040,045,066	SUNNY	005,088	
092,111	STAR COM	029,038	
HISANSAT	3010-00	STAR SAT	031,038
HYUNDAI	040,066	STAR TRACK	037
JVC	048,065,079	SUNN	005,013,088
KONKA	004,012,041,102	SONIC	010,013,031,066,111
LIFE MAX	048	STAR-X	003,010,031,038,106
008,013,015,016	VIVA	038	
025,028,031,066	VISION	007,023,027,044	
077,092,093,094	WALTON	001,023,025,031	
098,105,114	062,068,103		
MARSHAL	001,023	X.VISION	048,059,070
MEERWALS	040	YASIN	006,023,037,066
MY ONE	009,031,033		
MY CHOICE	066,101		
MOONX	005,023,027,045		